



VMD460-NA

Network and system protection (NS protection) for monitoring
the network feed-in from generating plants

Software version, measurement technology: D398 V1.3x

Software version, display: D403 V2.4x



Quick-start guide

The quick-start guide does not replace the operating manual!

Source document manual:

VMD460-NA_D00001_0x_M_XXEN.pdf

Download at:

www.bender.de/en/service-support/downloads

Scope of delivery

- One VMD460-NA
- Safety instructions
- This quick-start guide

Intended use

The VMD460-NA voltage and frequency monitoring relay is used for network and system protection (NS protection) of CHP plants, wind power stations, hydroelectric power stations and photovoltaic systems feeding power into the network. If inadmissible voltage and frequency values occur on the supply side, the VMD460-NA disconnects the generating plant from the public network by means of an interface switch.

In order to meet the requirements of the applicable standards, adaptation to the system and operating conditions must be carried out on site. Please heed the limits of the area of application indicated in the technical specifications.

Any other use than that described in this document is regarded as improper.

Safety instruction



DANGER! Danger of electric shock.


Touching live parts of the system carries the risk of:

- An electric shock
- Damage to the electrical installation
- Destruction of the device

Before installing and connecting the device, make sure that the installation has been de-energised. The rules for working on electrical systems must be observed.

The standards and regulations of the respective location apply.


Dimensions

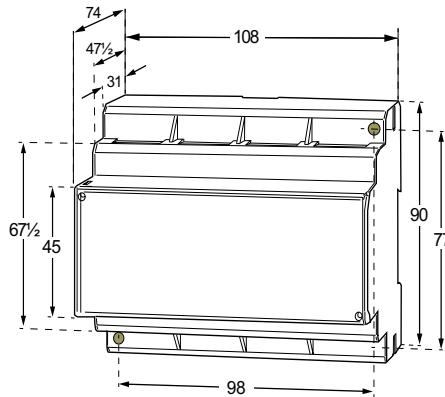


All dimensions in mm

Installation


DIN rail (schematic diagram)

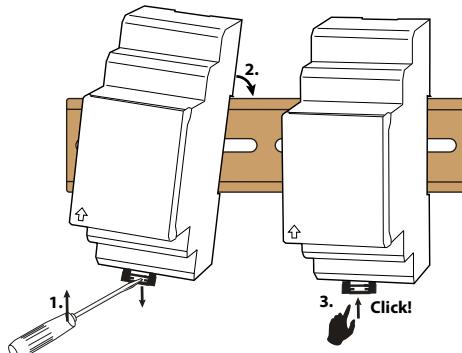

Screw mounting

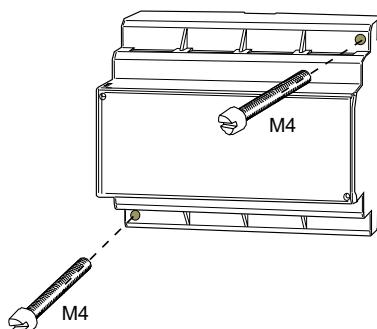

Connections

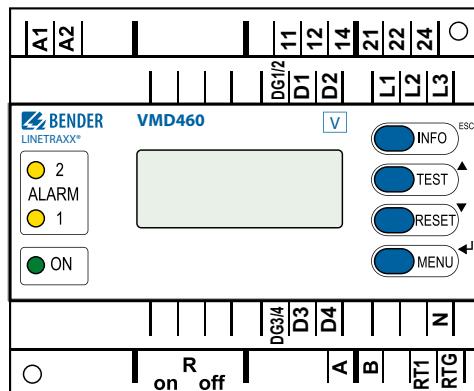




| | |
|---------------|-----------------------------------------------------------------------------------------------------------------------|
| A1, A2 | Supply voltage U _s |
| L1, L2, L3, N | Power supply connection |
| K1, K2 | Relay connections |
| DG1/2, D1, D2 | Contact monitoring interface switch DG1/2: GND D1: Feedback signal contact K1 D2: Feedback signal contact K2 |
| RTG, RT1 | RTG: GND RT1: remote trip input |
| A, B | Service interface |
| Ron/off | Terminating resistor of the service interface (120 Ω) |
| DG3/4, D3, D4 | Digital inputs |

Application standards


| Standard/application guide | Name on the display |
|-----------------------------------------------------------------|---------------------|
| VDE-AR-N 4105:2018-09 | 4105_2 |
| VDE-AR-N 4105:2011-08 | 4105_1 |
| VDE-AR-N 4110:2018-11 | 4110 |
| BDEW technical guideline 2008 with amendments until 01.2013 | BDEW |
| DIN V VDE V 0126-1-1:2006-02/A1:2012-02 | 0126 |
| CEI 0-21(:2012-06,:V1:2012-12,:V2:2013-12,:2014-09,:V1:2014-12) | CEI 021 |
| C10/11:2012-06 | C10/11 |
| G98:2018-05 | G98 |
| G83/2:2012 and G59/3:2013 | G83/2 |
| G99:2018-05 | G99 |
| G59/2(:2010, -1:2011) | G59/2 |

Wiring diagram VDE-AR-N 4105:2018 - basic program 4105_2,

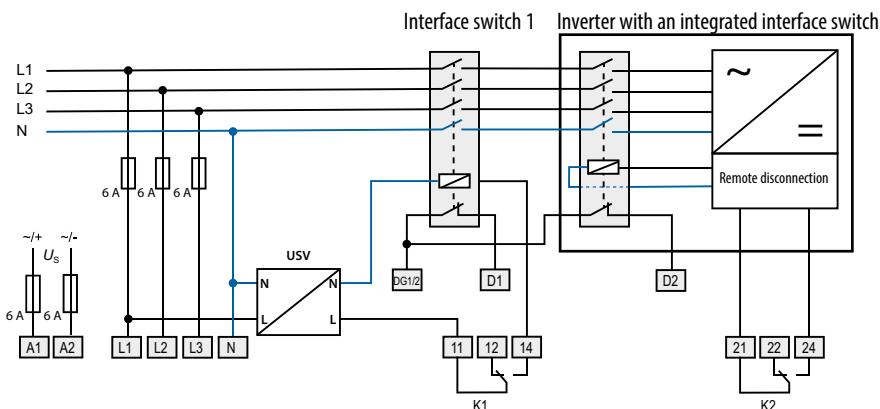

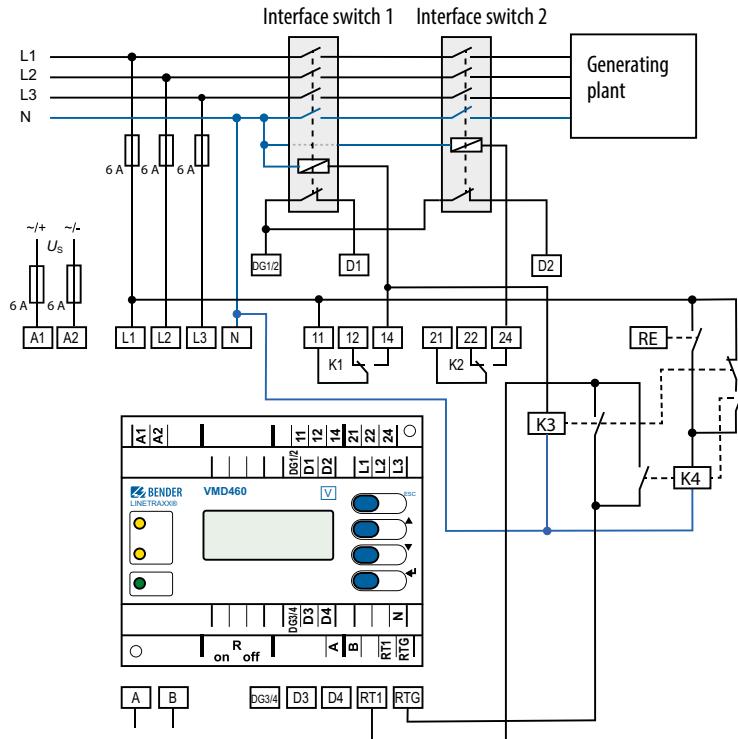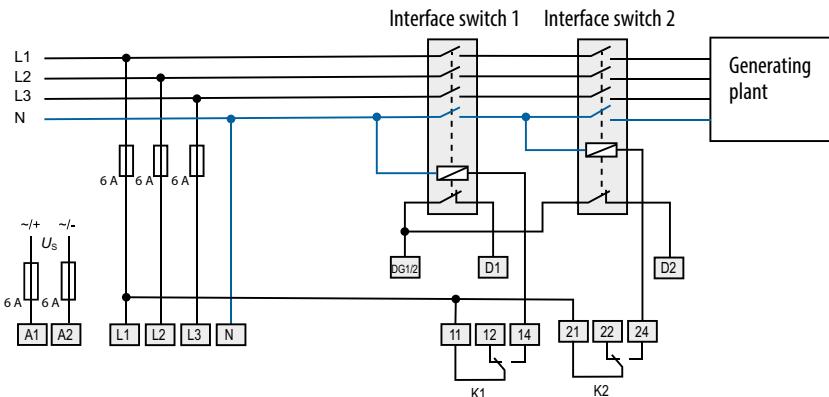Wiring diagram VDE-AR-N 4110:2018-11 – basic program 4110 (suggestion)

**Wiring diagram EREC G99, G98, C10/11, DIN V VDE V 0126-1-1
basic programs G98, G99, C10/10, 01261**

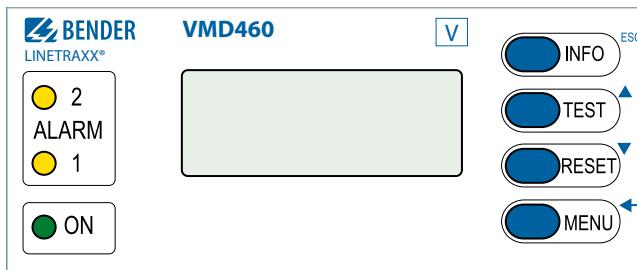Further wiring diagrams in the manual.

Operating elements



| Element | Function |
|------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| ON | Power On LED (green): lights when the voltage supply is available and the device is in operation; flashes when the device is being started or when an internal device error has occurred |
| ALARM1 ALARM2 | System disconnected: Both LEDs light (yellow): In case of a limit value violation of voltage or frequency, remote disconnection (remote trip, optional), df/dt (optional), vector shift detection (optional), unbalance (optional); Both LEDs flash (yellow): In case of an internal device error or contact monitoring error Only ALARM 1 lights: Reconnection conditions met. t(ON) elapses |
| | Backlit LC display |
| INFO ESC | Standard display: Measured value display and device information Menu display: Exit the parameter setting menu without saving; Go to the next higher menu level |
| TEST | Standard display: The TEST button (> 1.5 s) is used to start a manual self test which triggers both output relays (tripping test to check the interface switches). In addition, the disconnection times are documented. Menu display: Arrow-up button for parameter change and scrolling |
| RESET | Standard display: (> 1.5 s) Acknowledge error messages from contact monitoring Menu display: Arrow-down button for parameter change and scrolling |
| MENU | Standard display: Toggle between standard, menu and alarm display Menu display: Go to setting parameters; save changes |

Navigation

| Button | Navigation | Function |
|--------|------------|----------------------------------------------------------------------------------|
| INFO | ESC | Jump back one menu level |
| TEST | ▲ | Menu item selection (previous); parameter selection (previous) Value increase |
| RESET | ▼ | Menu item selection (next); parameter selection (next) Value decrease |
| MENU | ◀ | Confirm entered value |

Menu structure (MENU)

| | | | |
|---------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------|
| Alarm/meas. values | U(1-N); U(2-N); U(3-N); U10LN; U10LL; U(1-2); U(2-3); U(3-1); frequency; df/dt; state; $t_{(ON)}$; unbalance; vect.shift**; rotating field; $t_{(OFF)}$ TOTAL; $t_{(OFF)}$ DEVICE | Specification of the parameter and the corresponding VALUE in each case See manual, chapter 5.4.2 | |
| History | Line 1: Event number Line 2: Start of the event: Date/time Line 3: Acknowledgement of the event: Date/time Line 4: End of the event: Date/time | See manual, chapter 5.4.3 | |
| Settings | The menu structures in the settings contain different entries for each standard. | See manual, chapter 6 | |
| System | History Language Clock Password Interface Alarm addresses TEST RESET Test communication External devices Factory settings | Clear history English/Deutsch/Italiano Format/date/time/summer time Password/state Address; master 1...90; slave 2...90 Address 1...150 Run TEST Perform RESET 1...12. channel List of connected devices Restore factory settings | See manual, chapter 5.4.4 |
| Info | Device name Current date and time BMS bus address Software version, measurement technology Software date, measurement technology Software version, display Software date, display Manufacturer of the device Address of the manufacturer Internet address of the manufacturer | See manual, chapter 5.4.5 | |

Commissioning steps

| | | |
|----------|----------------------------------------------|--------------------------------------------------------------|
| 1 | Select a language (English, German, Italian) | Menu 4.2 : 4. SYSTEM -> 2. Language |
| 2 | Set date and time additionally. | Menu 4.3 : 4. SYSTEM -> 3. Clock |
| 3 | Select a standard. | Menu 3.1.1 : 3. SETTINGS -> 1. General -> 1. Standard |

After commissioning, the parameters of the VMD460-NA can be changed.

i *Unauthorised changes. After commissioning, the essential settings of the VMD460-NA have to be protected against unauthorised changes by a password. If the password protection is not used, the device has to be sealed.*

Display contrast. Simultaneously press and hold down the buttons "INFO" and "MENU" until the display text is clearly readable.

Change of standard. Existing user-defined settings are not saved when the user standard is changed.

Technical data

Insulation coordination acc. to IEC 60664-1/IEC 60664-3

| | |
|------------------------------------------------------------------------------------------------------|---------|
| Rated voltage | 400 V |
| Rated impulse voltage | 6 kV |
| Pollution degree | 2 |
| Oversupply category | III |
| Voltage test according to IEC 61010-1: (N, L1, L2, L3) - (A1, A2), (11, 12, 14, 21, 22, 24) | 3.32 kV |

Supply voltage

| | |
|-------------------------------------|------------------------------------------|
| Nominal supply voltage U_s | AC/DC 100...240 V;DC/50/60 Hz |
| Operating range U_s | AC/DC 75...300 VDC/40...70 Hz |
| Power consumption at AC 230 V | < 7.5 VA/< 3.5 Wmax. 9 VA/3.5 W |

Measuring circuit

| | |
|--------------------------------------------------------|--------------|
| Nominal system voltage U_n (r.m.s. value) (L-N) | AC 0...300 V |
| Nominal system voltage U_n (r.m.s. value) (L-L) | AC 0...520 V |
| Rated frequency f_n ($U_n > 20$ V)..... | 45...65 Hz |

Response values

| | |
|---------------------------------------|-----------------------------------------------------------|
| System type | 1AC: 230 V, 50 Hz3(N)AC: 400/230 V, 50 Hz |
| Relative uncertainty, voltage | $U \leq 280$ V: ± 1 % $U > 280$ V: ± 3 % |
| Resolution of setting, voltage | 1 % |
| Nominal frequency | 50/60 Hz |
| Relative uncertainty, frequency | $\leq \pm 0.1$ % |
| Resolution of setting f | 0.05 Hz |

Time response

| | |
|------------------------------------------|----------------|
| Delay time for connection t_{on} | 40 ms...60 min |
|------------------------------------------|----------------|

Digital inputs

| | |
|-------------------------------------------------------------------------------------------------------------|------------------------------------|
| Monitoring of potential-free contacts or voltage inputs: ..closed = low; 0...4 V; $I_{in} < -5$ mA | open = high; $> 6\ldots \leq 30$ V |
| D1 | feedback signal contact K1 |
| D2 | feedback signal contact K2 |
| D3 | local control (mode) |
| D4 | external signal (mode) |
| RT1..... | remote trip |
| DG1/2, DG3/4, RTG..... | GND |
| Max. length of the connecting cables of digital inputs | 3 m |

Displays, memory

| | |
|----------------------------------------|----------------------------------------------------------------|
| Display | LC display, multi-functional, illuminated |
| Display range, measured value | AC/DC 0...520 V |
| Operating uncertainty, voltage | $U \leq 280$ V: $\leq \pm 1$ % $U > 280$ V: ± 3 % |
| Operating uncertainty, frequency | $\leq \pm 0.1$ % |

Switching elements

| | |
|-------------------------------------|----------------------------|
| Number of changeover contacts | 2 x 1 (K1, K2) |
| Operating mode..... | NC operation/NO operation. |

Environment/EMC

| | |
|----------------------------|--------------------------|
| EMC | DIN EN 60255-26/CEI 0-21 |
| Operating temperature..... | -25...+55 °C |

Classification of climatic conditions acc. to IEC 60721

| | |
|--------------------------------------------|------|
| (except condensation and formation of ice) | |
| Stationary use (IEC 60721-3-3) | 3K5 |
| Transport (IEC 60721-3-2) | 2K11 |
| Long-term storage (IEC 60721-3-1)..... | 1K22 |

Classification of mechanical conditions acc. to IEC 60721

| | |
|-----------------------------------------|------|
| Stationary use (IEC 60721-3-3) | 3M4 |
| Transport (IEC 60721-3-2) | 2M4 |
| Long-term storage (IEC 60721-3-1) | 1M12 |

Connection

Connection type.... screw-type terminals or push-wire terminals

Connection properties:

| | |
|------------------------|-----------------------------------------|
| rigid | 0.2...4 mm ² (AWG 24...12) |
| flexible | 0.2...2.5 mm ² (AWG 24...14) |
| Stripping length | 8...9 mm |
| Tightening torque..... | 0.5...0.6 Nm |

Other

| | |
|---------------------------------------------------------------|---------------------------|
| Operating mode | continuous operation |
| Mounting | any position |
| Degree of protection, internal components (DIN EN 60529) IP30 | |
| Degree of protection, terminals (DIN EN 60529) | IP20 |
| Flammability class | UL94 V-0 |
| DIN rail mounting acc. to | IEC 60715 |
| Screw mounting | 2 x M4 with mounting clip |
| Documentation number..... | D00001 |

()* = Factory setting

Ordering details

| Type | Supply voltage U_s | Art. No. |
|----------------------------------|-----------------------------------|-----------|
| VMD460-NA-D-2 | AC/DC 100...240 V/ DC 50/60 Hz | B93010045 |
| Mounting clip for screw mounting | | B98060008 |



The Power in Electrical Safety®

Alle Rechte vorbehalten.
Nachdruck und Vervielfältigung
nur mit Genehmigung des Herausgebers.

Bender GmbH & Co. KG

Postfach 1161 • 35301 Grünberg • Deutschland
Londorfer Str. 65 • 35305 Grünberg • Deutschland
Tel.: +49 6401 807-0 • Fax: +49 6401 807-259
E-Mail: info@bender.de • www.bender.de



All rights reserved.
Reprinting and duplicating
only with permission of the publisher.

Bender GmbH & Co. KG

P.O. Box 1161 • 35301 Grünberg • Germany
Londorfer Str. 65 • 35305 Grünberg • Germany
Tel.: +49 6401 807-0 • Fax: +49 6401 807-259
E-mail: info@bender.de • www.bender.de